

EasySplicer

How to splice SOC-FC Connectors




The different parts that makes up the SOC connector.

FC



Insert into the SOC-holder.

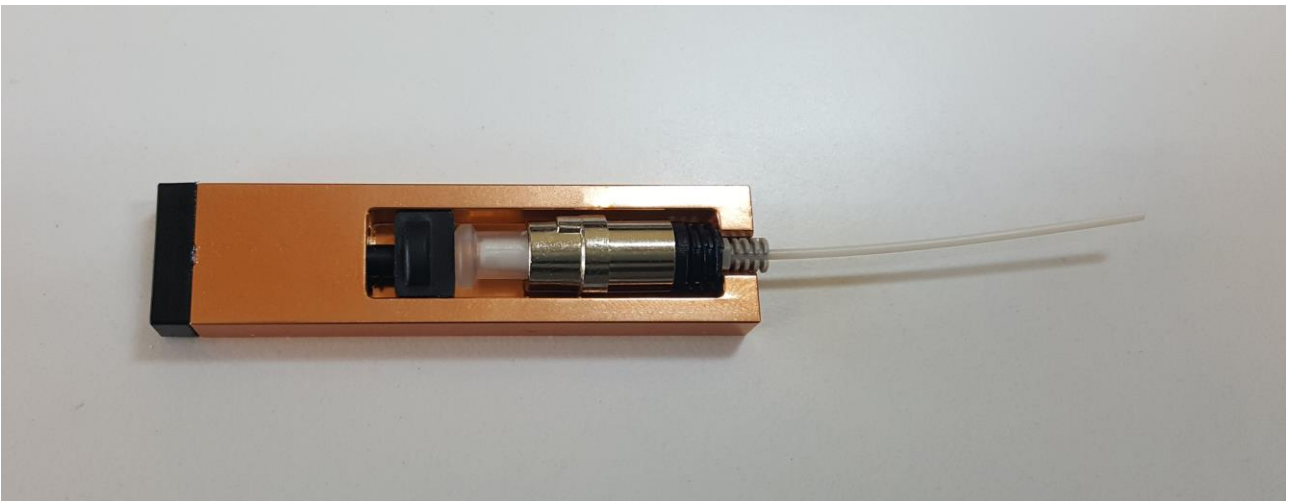

Line up the included parts like this:



After stripping, cleaning and cleaving of both sides.



Insert into the splicer like this. And splice.




After splicing, open the SOC holder and lift the connector out of the holder. Let the sleeve slide in place. Place in oven.

After oven has shrunk the sleeve.



Slide the housing in place.

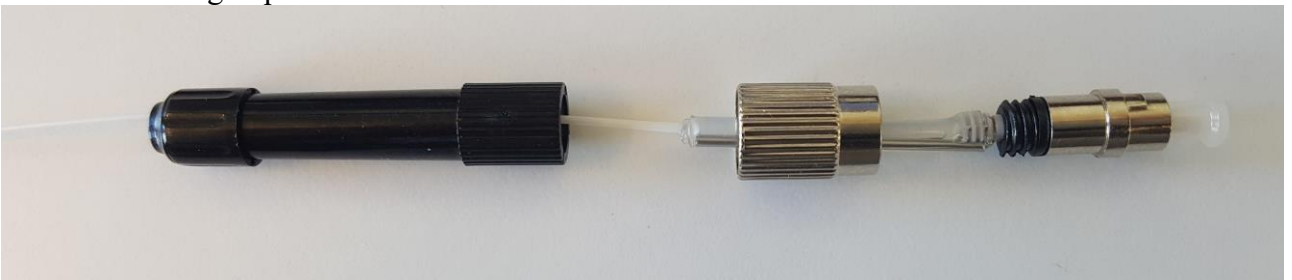

Screw together housing and connector.



Carefully tighten the relief to the left in picture.

Done.